














LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Argus	DC-3520/3640 QC-5430		•	•	
BenQ	DC C35/40/50/51/60/62				•
	DC C500			•	
	DC C530			•	
	DC C630			•	
	DC C800			•	
	DC E520+		•		
	DC E600		•		
	DC X600	•			
	DC-2410				•
Canon	Digital IXUS i/i5	•			
	Digital IXUS II/30/40		•		
	IXUS 30	•			
	IXUS 40	•			
	IXUS 50	•			
	IXUS 70		•		
	IXUS V		•		
	PowerShot A510/520				•
	PowerShot A530				•
	PowerShot A540				•
	PowerShot A700				•
	PowerShot A710 IS				•
	PowerShot S110		•		
	PowerShot SD 600/Digital IXUS 60		•		
	PowerShot SD 630/Digital IXUS 65		•		
	PowerShot SD10/SD20/IXY Digital	•			
	PowerShot SD30		•		
	PowerShot SD40/Ixus i7		•		
	PowerShot SD400	•			
	PowerShot SD450		•		
	PowerShot SD550		•		
	PowerShot SD700 IS/Digital IXUS 800 IS		•		
	PowerShot SD800 IS/Digital IXUS 850 IS			•	
	PowerShot SD900 IS/Digital IXUS 900 Ti		•		



LOWEPRO NAPOLI SERIES MATRIX 2007

					
		Napoli 5	Napoli 10	Napoli 20	Napoli 30
Casio	EXILIM EX-M20U/S20U	•			
	EXILIM EX-S100	•			
	Exilim EX-S600D	•			
	EXILIM EX-Z10		•		
	Exilim EX-Z1000		•		
	EXILIM EX-Z1050		•		
	EXILIM EX-Z110		•		
	EXILIM EX-Z120		•		
	EXILIM EX-Z3/Z4/Z4U	•			
	EXILIM EX-Z30/Z40/Z40LE	•			
	Exilim EX-Z5		•		
	EXILIM EX-Z50/Z55		•		
	EXILIM EX-Z500	•			
	EXILIM EX-Z57/Z750		•		
	Exilim EX-Z60	•			
	Exilim EX-Z600	•			
	Exilim EX-Z7	•			
	Exilim EX-Z70	•			
	EXILIM EX-Z75	•			
	Exilim EX-Z850		•		
EX-S770			•		
QV-R3/R4			•		
QV-R40/41/51/61/62			•		
Concord	1500			•	
	3047		•		
	Eye-Q 3103				•
	Eye-Q 5345Z			•	
Contax	i4R		•		
DXG	305V				•
	308				•
	321				•
	409		•		
	568				•
Epson	L500V			•	
	Photo PC L-410			•	
Fuji	FinePix A345/A350		•		
	FinePix A400/A500/A510			•	
	FinePix A600 Zoom			•	
	FinePix A700			•	
	FinePix F30		•		
	FinePix F31fd		•		
	FinePix F470		•		
	FinePix M603				•
	FinePix V10			•	
	FinePix Z3		•		
	FinePix Z5fd		•		






LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
		HP	Photosmart M22/M23 Photosmart M425 Photosmart M525 Photosmart M527 Photosmart R507 Photosmart R607 SE Photosmart R707/R717 Photosmart R725 Photosmart R727 Photosmart R817 Photosmart R818		•
Kodak	Easyshare C330 Easyshare C340 Easyshare C360 Easyshare C433 Easyshare C443 Easyshare C530 Easyshare C533 Easyshare C643 Easyshare C663 Easyshare C743 Easyshare C875 Easyshare Picture Viewer Easyshare V530 Easyshare V550 Easyshare V603 V550	•	•	•	•
Kyocera	Finecam S3/S3L/S3X/S4/S5/S5R			•	
Leica	C-Lux 1		•		
Minox	DC-6211		•		
Mustek	DV-3032 DV-4000 GSmart D35 MDC-5000			•	•
Nikon	Coolpix 4600/5600 Coolpix 5900/7900 Coolpix 7600 Coolpix L1 Coolpix L2, L3, L4 Coolpix L5 Coolpix L6 Coolpix P1 Coolpix P2 Coolpix P3, P4 Coolpix S5 Coolpix S8 Coolpix S9		•	•	•






LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Olympus	μ digital 600			•	
	AZ-1/Ferrari Digital			•	
	C-40 Zoom/D-40 Zoom				•
	D-535z/C-370z				•
	D-630			•	
	FE-100				•
	FE-110				•
	FE-115				•
	FE-120			•	
	FE-130			•	
	FE-140			•	
	FE-150		•		
	FE-170			•	
	FE-180			•	
	FE-190	•			
	FE-200		•		
	FE-210			•	
	FE-230/240/250	•			
	IR-500				•
	SP-310				•
	SP-320				•
	SP-350				•
	Stylus 1000/Mju Digital 1000		•		
	Stylus 700		•		
	Stylus 710		•		
	Stylus 720SW		•		
	Stylus 725AW		•		
	Stylus 730/Mju Digital 730			•	
	Stylus 740/Mju Digital 740		•		
	Stylus 750/Mju Digital 750		•		
	Stylus 760/Mju Digital 760			•	
	Stylus 770SW		•		
Stylus 810		•			
Stylus Verve/Verve S/μ-Mini/Mju Mini Digital		•			





LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Panasonic	DMC- FX07		•		
	DMC-FX01		•		
	DMC-FX1/FX1BS/FX5/FX5BS		•		
	DMC-FX2/FX2B/FX7/FX7B		•		
	DMC-FX3		•		
	DMC-FX8		•		
	DMC-FX9		•		
	DMC-LC33/43				•
	DMC-LC50/50B/70/70B/80/80B				•
	DMC-LC80				•
	Lumix DMC-FX10/FX12		•		
	Lumix DMC-FX30		•		
	Lumix DMC-LS1			•	
	Lumix DMC-LS60/LS75			•	
	SV-AV100			•	
SV-AV25			•		
Pentax	Optio 30				•
	Optio 50			•	
	Optio 50L			•	
	Optio 60			•	
	Optio A10		•		
	Optio A20		•		
	Optio E10			•	
	Optio E20			•	
	Optio E30			•	
	Optio L20	•			
	Optio M10			•	
	Optio M20		•		
	Optio M30		•		
	Optio S/S4/S4i/S5i	•			
	Optio S30				•
	Optio S40		•		
	Optio S45		•		
	Optio S50		•		
	Optio S55		•		
	Optio S5n	•			
	Optio S5z		•		
	Optio S6	•			
	Optio S60		•		
	Optio S7	•			
	Optio SV	•			
Optio T10		•			
Optio T30		•			
Ricoh	Caplio R30		•		
	Caplio R40		•		
	Caplio R5		•		

LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Rollei	da5324			•	
	Prego da6			•	
	Prego dp4200		•		
	Prego dp5300/6300				•
	Prego dp6200		•		
	Prego dp6500			•	
Samsung	Digimax 35MP3				•
	Digimax A7			•	
	Digimax i5	•			
	Digimax i6 PSP		•		
	Digimax L60		•		
	Digimax L70			•	
	Digimax S1000			•	
	Digimax S500/S600/S800			•	
	Digimax S700			•	
	Digimax U-CA 401			•	
	Digimax U-CA 501/505		•		
	i70		•		
	L77		•		
	NV10			•	
	NV3		•		
	S830/S1030			•	
	SC-M105		•		
	SC-X105L			•	
Sanyo	DSC-S5 Xacti			•	
	Xacti DSC-E6			•	
	Xacti DSC-S6			•	
Sony	DCR-IP1				•
	DSC-L1		•		
	DSC-N1		•		
	DSC-N2		•		
	DSC-S40				•
	DSC-S500			•	
	DSC-T10	•			
	DSC-T30		•		
	DSC-T33		•		
	DSC-T5		•		
	DSC-T50		•		
	DSC-T7		•		
	DSC-T9	•			
	DSC-W100			•	
	DSC-W15				•
	DSC-W17				•
DSC-W30, W50, W70		•			
DSC-W5/W7				•	
Toshiba	PDR-3340				•
UMAX	Astrapix 610			•	
	Astrapix A680	•			
Vivitar	DVR-210				•
	V3105		•		

LOWEPRO NAPOLI SERIES MATRIX 2007

	 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
V3315				•
V3345/3355		•		
V3650			•	
V3695				•
V3750			•	
V3826				•
V5388			•	
V6300			•	
V7310			•	
Vivicam 10				•
Vivicam 25		•	•	
Vivicam 3780	•			
Vivicam 4345			•	
Vivicam 5385			•	