





**LOWEPRO SLIDER SERIES MATRIX 2007**





		 Slider 10	 Slider 20	 Slider 30
<b>Argus</b>	DC-3200			•
	DC-3520/3640		•	•
<b>BenQ</b>	DC C500		•	
	DC E30/40/41/43/53	•		
	DC X600	•		
<b>Canon</b>	Digital IXUS 430/500			•
	Digital IXUS i/i5	•		
	Digital IXUS II/30/40		•	
	IXUS 30		•	
	IXUS 40		•	
	IXUS 50		•	
	IXUS 70		•	
	IXUS V			•
	PowerShot S110			•
	PowerShot SD 600/Digital IXUS 60	•		
	PowerShot SD 630/Digital IXUS 65	•		
	PowerShot SD10/SD20/IXY Digital	•		
	PowerShot SD30	•		
	PowerShot SD40/Ixus i7	•		
	PowerShot SD400		•	
	PowerShot SD450		•	
	PowerShot SD550			•
	PowerShot SD800 IS/Digital IXUS 850 IS			•
<b>Casio</b>	EXILIM EX-M20U/S20U	•		
	EXILIM EX-S100	•		
	Exilim EX-S600D	•		
	EXILIM EX-Z10		•	
	Exilim EX-Z1000		•	
	EXILIM EX-Z110		•	
	EXILIM EX-Z120		•	
	EXILIM EX-Z3/Z4/Z4U		•	
	EXILIM EX-Z30/Z40/Z40LE		•	
	Exilim EX-Z5		•	
	EXILIM EX-Z50/Z55		•	
	EXILIM EX-Z500		•	
	EXILIM EX-Z57/Z750		•	
	Exilim EX-Z60		•	
	Exilim EX-Z600	•		
	Exilim EX-Z7		•	
	Exilim EX-Z70		•	
	EXILIM EX-Z75		•	
	Exilim EX-Z850			•
<b>Concord</b>	1500		•	
	3047			•
<b>Contax</b>	i4R	•		
	SL300RT		•	
<b>DXG</b>	409	•		
	528	•		
<b>Epson</b>	L500V		•	
	Photo PC L-410		•	

\*Availability may vary by country or location

**LOWEPRO SLIDER SERIES MATRIX 2007**

		 Slider 10	 Slider 20	 Slider 30
<b>Fuji</b>	FinePix A345/A350		•	
	FinePix F470	•		
	FinePix Z3	•		
	FinePix Z5fd	•		
<b>HP</b>	Photosmart E317	•		
	Photosmart R507			•
	Photosmart R817		•	
	Photosmart R818		•	
<b>Kodak</b>	Easyshare Picture Viewer		•	
	Easyshare V530		•	
	Easyshare V550		•	
	Easyshare V570	•		
	Easyshare Z705	•		
	V550		•	
<b>Kyocera</b>	Finecam S3/S3L/S3X/S4/S5/S5R		•	
	SL300R/400R		•	
<b>Leica</b>	C-Lux 1		•	
<b>Mustek</b>	MDC-5000		•	
<b>Nikon</b>	Coolpix S5		•	
	Coolpix S6		•	
	Coolpix S7c		•	
	Coolpix S8		•	
	Coolpix S9	•		
<b>Olympus</b>	AZ-1/Ferrari Digital		•	
	AZ2		•	
	D-630		•	
	FE-200			•
	FE-230/240/250	•		
	IR-300	•		
	IR-500		•	
	Stylus 710	•		
	Stylus 725AW		•	
	Stylus 730/Mju Digital 730		•	
	Stylus 740/Mju Digital 740		•	
	Stylus 750/Mju Digital 750		•	
	Stylus 760/Mju Digital 760			•
	Stylus 770SW		•	

**LOWEPRO SLIDER SERIES MATRIX 2007**

		 Slider 10	 Slider 20	 Slider 30
<b>Panasonic</b>	DMC- FX07		•	
	DMC-F7	•		
	DMC-FX01		•	
	DMC-FX1/FX1BS/FX5/FX5BS		•	
	DMC-FX2/FX2B/FX7/FX7B	•		
	DMC-FX3		•	
	DMC-FX8		•	
	DMC-FX9		•	
	Lumix DMC-FX10/FX12		•	
	Lumix DMC-FX30		•	
	Lumix DMC-LS1		•	
	NV10		•	
	SV-AS10	•		
	SV-AV25		•	
	SV-AV50	•		
<b>Pentax</b>	Optio 33WR/43WR			•
	Optio 50		•	
	Optio 50L		•	
	Optio 60			•
	Optio L20	•		
	Optio M30	•		
	Optio S/S4/S4i/S5i		•	
	Optio S40		•	
	Optio S45		•	
	Optio S50		•	
	Optio S55		•	
	Optio S5n		•	
	Optio S5z		•	
	Optio S6	•		
	Optio S60		•	
	Optio S7	•		
	Optio SV	•		
	Optio T10	•		
	Optio T30	•		
	Optio W10	•		
	Optio W20	•		
<b>Ricoh</b>	Caplio R1v	•		
	Caplio R30			•
<b>Rollei</b>	dp8300			•
	dr 5	•		
	Prego dp4200		•	

**LOWEPRO SLIDER SERIES MATRIX 2007**

		 Slider 10	 Slider 20	 Slider 30
<b>Samsung</b>	Digimax i5		•	
	Digimax L60	•		
	Digimax L85		•	
	Digimax U-CA 3	•		
	Digimax U-CA 401		•	
	Digimax U-CA 501/505	•		
	Digimax U-CA5	•		
	Digimax V600/V700	•		
	NV10		•	
	NV3	•		
<b>Sanyo</b>	DSC-S5 Xacti		•	
	VPC-J4 Xacti	•		
	Xacti DSC-E6			•
	Xacti DSC-S6			•
<b>Sony</b>	DSC-L1	•		
	DSC-N1		•	
	DSC-N2		•	
	DSC-T10	•		
	DSC-T30		•	
	DSC-T33		•	
	DSC-T5		•	
	DSC-T50		•	
	DSC-T7		•	
	DSC-W5/W7		•	
<b>UMAX</b>	Astrapix A680	•		
<b>Vivitar</b>	V3345/3355	•		
	V3650		•	
	V3750		•	
	V7310		•	
	Vivicam 25		•	
	Vivicam 3780		•	
	Vivicam 4345		•	